TENSION POLE SHOWER CADDY

Assembly guide

What's in the box



Long section
×5



Short section
×1



Connector
×6



Section with lock
×1



Top section
×1




Cap
×1




Foot
×1




Bracket
×4

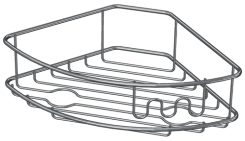

Basket
×3

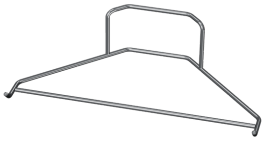

Towel rail
×1

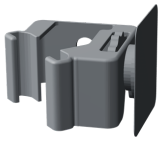

Stopper and clip
×1



Screws, Allen key and knob
×12 + 1 + 1

Before you start

Measure from floor to ceiling and find your height

Ceiling height	Sections to use
179-199 cm	3 long
200-219 cm	3 long + 1 short
220-239 cm	4 long
240-260 cm	4 long + 1 short
261-280 cm	5 long
281-301 cm	5 long + 1 short

You need a **tape measure** and a cloth with **alcohol**. The Allen key is included.

Depending on your ceiling, you may have **parts left over**: that's normal.

You always use the **foot**, the **section with lock** and the **top section** with its cap.

STEPS 1 TO 4

Assembly on the floor



1 The base

Push the grey foot into the **short section**. Insert a connector in the other end and screw it in with the Allen key. If your height doesn't use the short section, the foot goes straight into a long section.



2 The long sections

Fit a long section onto the connector and screw it in. Insert another connector at the top and screw it in. Repeat with the sections for your height: **2 screws per joint**.



3 The brackets

Slide the **4 brackets** on from the top, with the **slot facing up** (that's where the baskets hook in later). Leave them at the bottom for now: you'll set their height at the end.



4 The top section

Screw the **section with lock** onto the last connector, with the lock facing up. Put the cap on the top section, **open the white tab** on the lock and insert the top section.


STEPS 5 TO 8

Adjusting and fitting




5 The wall stopper

Fit the **clip** near the top of the caddy and slot the **stopper** into it. Later you'll stick it to the wall to make the caddy more stable: for now, leave the adhesive film on.

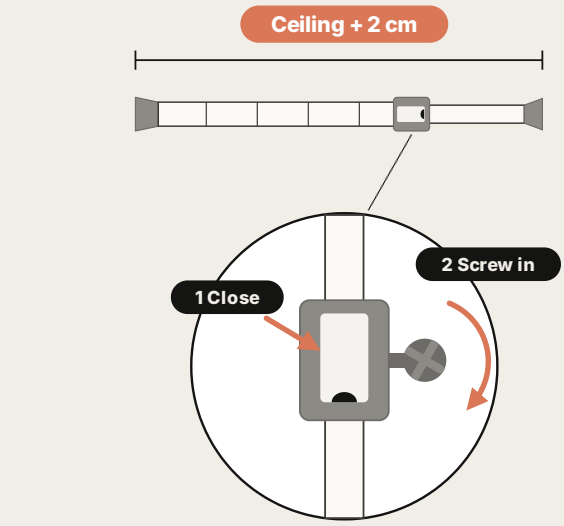


6 Set the length

Measure from the foot to the cap: it must be **2 cm longer** than your ceiling height. Close the white tab and screw the **knob** in firmly (it comes separately, in a small bag).

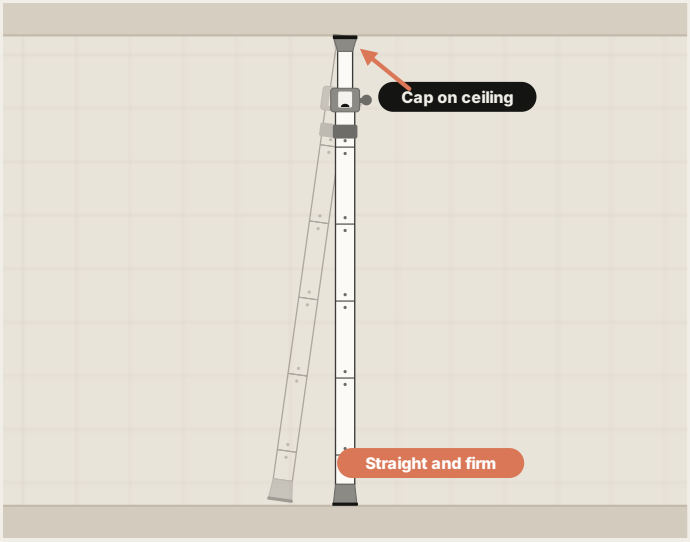

7 Stand it up

Take the caddy into the shower. Rest the cap against the ceiling with the caddy at an angle and push up: the cap has a **spring** inside that compresses and presses it against the ceiling. Then push the foot until the caddy stands **straight**. If it moves, check the length.

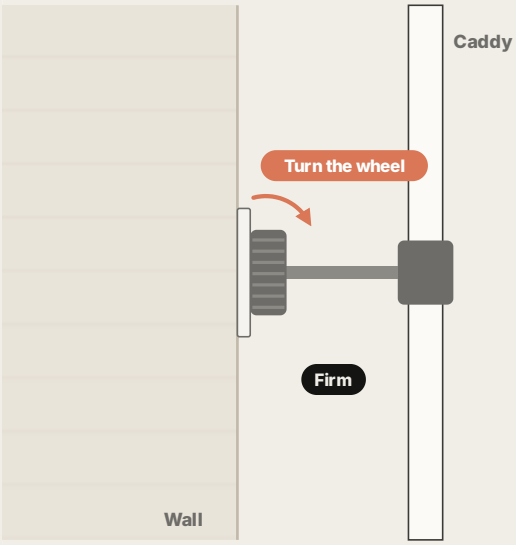



8 Stick the stopper

Clean the wall with alcohol and let it dry. Peel off the film, stick the stopper on and **turn the wheel** until the caddy no longer moves.

STEPS 9 AND 10

Baskets and tips

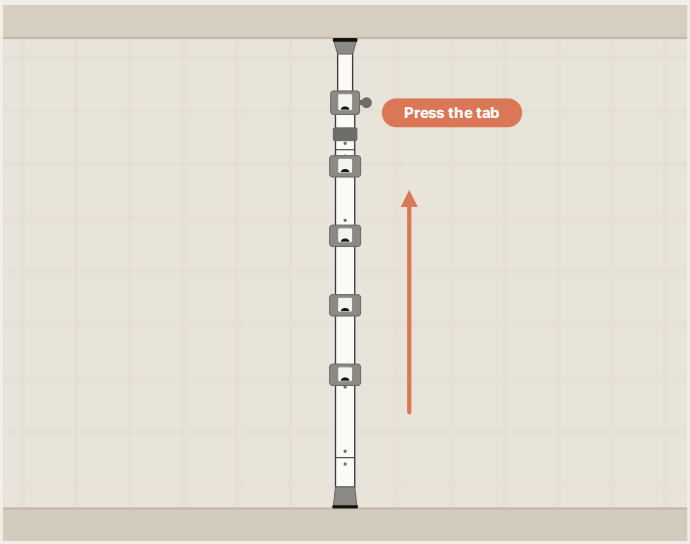

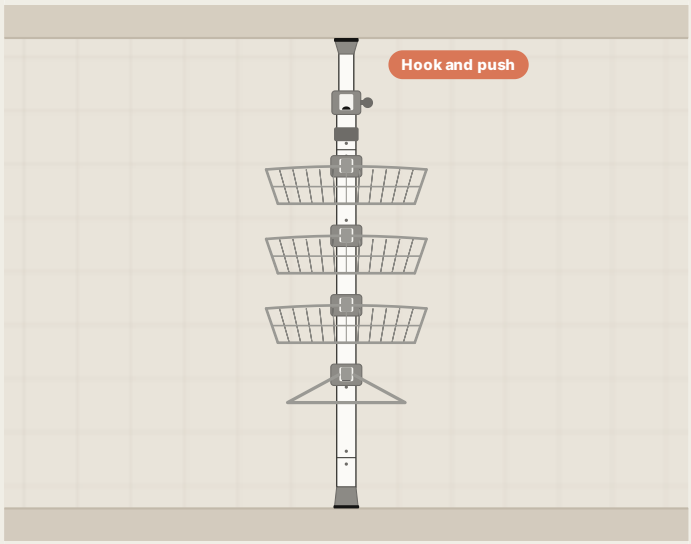


9 Position the brackets

Slide each bracket to the height you want and **press the white tab** to lock it.

10 Baskets and towel rail

Hook each basket and the towel rail into the slot of a bracket and **push down** until they click into place.

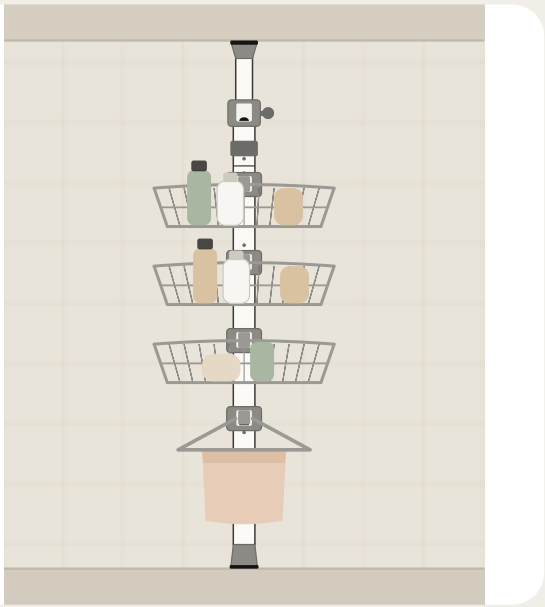

- Maximum **5 kg** per basket.
- Assemble with the floor and ceiling **dry**.
- Not suitable for **sloping ceilings** or suspended ceilings.
- Check the **tension** now and then.
- To move it: open the lock and lower the top section.

SAFETY

Stability
Fit it straight and tight between a solid floor and ceiling so it can't fall.

Not a grab rail
Don't lean on it, hang from it or use it as a step.

Children
Keep packaging, plastic bags and small parts out of their reach: choking hazard.

Manufacturer and importer: Binsumo Productos SL (Erreke) · Carrer de Júcar 6, 43883 Roda de Berà (Tarragona), Spain · soporte@erreke.com · Made in China.